

# INSTALLATION, OPERATION and MAINTENANCE MANUAL

## Model RF83 Flow Switch/Monitor

Doc. No. 003147

Rev. B

U.S. Patent Numbers 3,898,638 and 4,449,403

---

### **Notice of Proprietary Rights**

---

This document contains confidential technical data, including trade secrets and proprietary information which are the property of Fluid Components Intl (FCI).

Disclosure of this data to you is expressly conditioned upon your assent that its use is limited to use within your company only (and does not include manufacture or processing uses). Any other use is strictly prohibited without the prior written consent of FCI.

---

*© Copyright 1995 Fluid Components Intl  
a limited liability company  
All Rights Reserved*



## CUSTOMER COMMITMENT PLEDGE

We will work closely with our customers to provide the best products and service

- at a competitive value
- on time
- with unquestioned support

in full compliance with our *COMPLETE CUSTOMER COMMITMENT*.

## COMMITMENT TO QUALITY

In keeping with the overall commitment of management and employees of Fluid Components Intl to Total Quality Management, the Manual Committee (Quality Circle) expresses its pledge and mission to you, our customer:

*“To support the creation and publication of world-class technical material which is technically accurate and practical, concise and user-friendly, attractive and professional in appearance, and consistent in form, format, content, and style.”*

## QUALITY IMPROVEMENT

We appreciate your comments and suggestions which support our effort to constantly improve our product and services. Please address comments and suggestions to your nearest field representative or in-house technical support representative. Thank you.

FCI Technical Publications Department

## **CUSTOMER SERVICE/TECHNICAL SUPPORT**

FCI provides full in-house technical support for our products 7 a.m. to 5 p.m. PST, Monday through Friday (excluding holidays and an annual plant closure between Christmas and New Year's day). Also, additional technical representation is provided by FCI field representatives. Before contacting one of our field or in-house representatives, please ensure that you have performed the troubleshooting techniques outlined in this document.

### ***By Mail***

Fluid Components Intl  
1755 La Costa Meadows Dr.  
San Marcos, CA 92069  
Attn: Customer Service Department

### ***By Phone***

Contact the FCI regional representative in your area. If you are unable to contact the field representative or are unable to satisfactorily resolve the situation, contact the FCI Customer Service Department at (619) 736-6116 or call toll free (800) 854-1993.

### ***By Fax***

To describe your problems in a more graphic or pictorial manner, send your regional representative a fax. The fax should include your phone and fax number. Again FCI is available through facsimile if you have exhausted your possibilities with the authorized factory representative. Our fax number is (619) 736-6250; it is available 7 days a week, 24 hours a day.

### ***International support***

For product information or product support outside the contiguous United States, Alaska, or Hawaii, contact your country's FCI International Representative or the one nearest to you. See list on following pages.

Appendix C contains a detailed explanation of the FCI customer service policy on returns, adjustments, in-field or factory repair, in- or out-of-warranty.

Reserved for Domestic Rep Map

Reserved for International Rep Map

# Contents

## Chapter 1 - General Information

Description .....	1-1
Flow Element .....	1-1
Control Circuit .....	1-2
Specifications .....	1-2

## Chapter 2 - Installation

Receiving/Inspection .....	2-1
Packing/Shipping/Returns .....	2-1
Required Materials .....	2-1
Pre-Installation .....	2-1
Use Standard ESD Precautions .....	2-1
Verify Serial Numbers .....	2-2
Verify Installation Location .....	2-2
Flow Element Installation .....	2-2
Threaded Mounting .....	2-2
Flanged Mounting .....	2-3
Packing Gland Assembly .....	2-3
Control Circuit Installation .....	2-3
Wiring Installation .....	2-3
Conduit Routing .....	2-3
Minimum Wire Size .....	2-3
Cable Connections .....	2-4

## Chapter 3 - Operation

Factory Calibrations .....	3-1
Field Calibrations for Flow Applications .....	3-1
Alarm Set Point Adjustments By Observation or By Measurement .....	3-1
Alarm A Set Point Procedure .....	3-1
Alarm B Set Point Procedure .....	3-3
Balancing .....	3-3
Creating a Calibration Curve Using the Millivolt Output Option .....	3-4
Creating a Calibration Curve Using an FM71 Calibrator .....	3-4

## Chapter 4 - Maintenance

Maintenance .....	4-1
Alarm Set Point Verification .....	4-1
Enclosures .....	4-1
Electrical Wiring .....	4-1
Electrical Connections .....	4-1
Process Connection .....	4-1
Flow Element .....	4-1

## Chapter 5 - Troubleshooting

Tools Needed .....	5-1
Quick Check .....	5-1
Non-maintenance Observations .....	5-1
Check Serial Numbers .....	5-1
Check Input Power .....	5-1
Check the Instrument Installation .....	5-1
Check for Moisture .....	5-1
Check Application Design Requirements .....	5-2
Control Circuit Dash Number Specification .....	5-2
Verification of Flow Element Resistance .....	5-2
Verification of Flow Element Voltage .....	5-3
Spares .....	5-5
Defective Parts .....	5-5
Customer Service .....	5-5

**Appendix A - Drawings**

Outline Drawings ..... A - 1

**Appendix B - Glossary**

Standard Usage of Terms ..... B - 1

**Appendix C - Customer Service**

Customer Service Policy and Procedures ..... C - 1

**Figures**

1-1 Process Installation Showing the Sensing Point ..... 1 - 1

2-1 Pipe, Flange and Packing Gland Assemblies ..... 2 - 2

3-1 Setting Forward and Reverse Alarm Switch Points ..... 3 - 2

3-2 Control Circuit Outline Drawing ..... 3 - 2

5-1 Troubleshooting Flow Chart ..... 5 - 4

A-1 Threaded Process Connection ..... A - 1

A-2 Threaded Low Pressure Packing Gland ..... A - 1

A-3 Threaded Medium Pressure Packing Gland ..... A - 1

A-4 Flanged Process Connection ..... A - 2

A-5 Flanged Low Pressure Packing Gland ..... A - 2

A-6 Flanged Medium Pressure Packing Gland ..... A - 2

A-7 Local Enclosure NEMA Type 4X and 7 Hazardous Location ..... A - 3

A-8 Remote Enclosure NEMA Type 4 ..... A - 3

A-9 Remote Enclosure NEMA Type 4 and 7 Hazardous Location ..... A - 3

A-10 0018 Control Circuit Module ..... A - 4

A-11 Wiring Diagram Local Enclosure, Regulated Heater ..... A - 5

A-12 Wiring Diagram Remote Enclosure, Regulated Heater ..... A - 5

A-13 Control Circuit Options - Wiring Diagrams ..... A - 6

A-14 Control Circuit Options - Wiring Diagrams ..... A - 7

A-15 Control Circuit Options - Wiring Diagrams ..... A - 8

A-16 Control Circuit Options - Wiring Diagrams ..... A - 9

**Tables**

2-1 Interconnecting Cable Size ..... 2 - 4

5-1 Local Flow Element Resistances in Ohms ..... 5 - 2

5-2 Remote Flow Element Resistances in Ohms ..... 5 - 3

5-3 Local Flow Element Voltages ..... 5 - 3

5-4 Remote Flow Element Voltages ..... 5 - 3

# Symbols

The following symbols are used throughout the manual to draw attention to items or procedures that require special notice or care.



**Warning:** Warns of possible **personal danger** to those handling the equipment.



**Caution:** Cautions against possible **equipment damage**.



**Note:** Contains important information.

